

To place an IP call:

Step 1. Pick up the remote to activate. You will see this screen

Step 2. Press the green Call-Hang Up button. You will see this screen.
Step 3. Using left arrow key backspace to remove existing numbers or IP address.



Step 4. Using the keypad enter the number or IP address.

Step 5. Make sure the call quality is set to 384.



Step 6. Press Call-Hang Up Button

